


Important Information About Your Wireless PCI Adapter

Your Wireless PCI Adapter consists of:

- One external remote antenna with attached 1.5 meters (5 feet) cable
- One (small sized) CD with *Quick Installation Guide* and *User's Manual*.

NOTE: The PCI adapter card and driver are pre-installed in your PC.

- 1 Locate the antenna and the CD, labelled *Wireless PCI Adapter*; they are together in the PC box or accessory box.

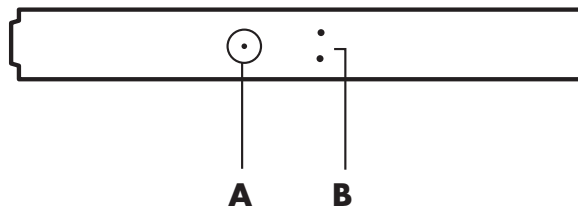

- 2 Screw the antenna cable to the antenna connector (**A**) located on the back of your PC near the PCI adapter status indicators (**B**).
- 3 Place the antenna on the desktop PC or a table to get better data transmission and reception.
- 4 Configure the Wireless PCI Adapter. Refer to the documentation on the CD.

Refer to the *Quick Installation Guide* or the *User's Manual* on the CD for steps to connect, position the antenna, or configure your Wireless PCI Adapter.

Printed in

